

© 2004 by NETGEAR, Inc. All rights reserved.

Trademarks

NETGEAR® is a registered trademark of NETGEAR, Inc. in the United States and other countries. Auto Uplink™ is a trademark of NETGEAR, Inc. All other trademarks and registered trademarks are the property of their respective owners.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the products described in this document without notice. NETGEAR does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Certificate of the Manufacturer/Importer

It is hereby certified that the NETGEAR Model FSM7326P Managed Power over Ethernet Switch has been suppressed in accordance with the conditions set out in the BMPT-AmtsblVfg 243/1991 and Vfg 46/1992. The operation of some equipment (for example, test transmitters) in accordance with the regulations may, however, be subject to certain restrictions. Please refer to the notes in the operating instructions.

Federal Office for Telecommunications Approvals has been notified of the placing of this equipment on the market and has been granted the right to test the series for compliance with the regulations.

Voluntary Control Council for Interference (VCCI) Statement

This equipment is in the first category (information equipment to be used in commercial and/or industrial areas) and conforms to the standards set by the Voluntary Control Council for Interference by Data Processing Equipment and Electronic Office Machines that are aimed at preventing radio interference in commercial and/or industrial areas.

Consequently, when this equipment is used in a residential area or in an adjacent area thereto, radio interference may be caused to equipment such as radios and TV receivers.

Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

EN 55 022 Declaration of Conformance

This is to certify that the NETGEAR Model FSM7326P Managed Power over Ethernet Switch is shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55024 Class A (CISPR 22).

EN 55 022 and EN 55 024 Statements

This is to certify that the NETGEAR Model FSM7326P Managed Power over Ethernet Switch is shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class A (CISPR 22) and EN 55 024.



Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take appropriate measures.

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (NETGEAR Model FSM7326P Managed Power over Ethernet Switch) do not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique (NETGEAR Model FSM7326P Managed Power over Ethernet Switch) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

Customer Support

For assistance with installing and configuring your NETGEAR system or with questions or problems following installation:

- Check the NETGEAR Web page at <http://www.netgear.com>.
- Call Technical Support in North America at 1-888-NETGEAR. If you are outside North America, please refer to the phone numbers listed on the Support Information Card that shipped with your switch.
- Email Technical Support at support@NETGEAR.com.

Defective or damaged merchandise can be returned to your point-of-purchase representative.

Internet/World Wide Web

NETGEAR maintains a World Wide Web home page that you can access at the uniform resource locator (URL) <http://www.netgear.com>. A direct connection to the Internet and a Web browser such as Internet Explorer or Netscape are required.

CONTENTS

CHAPTER 1: INTRODUCTION	5
<i>Overview.....</i>	<i>5</i>
<i>Features</i>	<i>6</i>
<i>Package Contents.....</i>	<i>8</i>
CHAPTER 2: PHYSICAL DESCRIPTION.....	9
<i>Front and Back Panels</i>	<i>9</i>
<i>10/100 Mbps RJ-45 Ports</i>	<i>9</i>
<i>MiniGBIC/Twisted Pair Combo Ports</i>	<i>10</i>
<i>LED Descriptions.....</i>	<i>11</i>
<i>Console Port.....</i>	<i>11</i>
CHAPTER 3: INSTALLATION	13
<i>Step 1: Preparing the Site.....</i>	<i>13</i>
<i>Step 2: Installing the Switch.....</i>	<i>14</i>
<i>Step 3: Checking the Installation.....</i>	<i>14</i>
<i>Step 4: Applying AC Power.....</i>	<i>14</i>
<i>Step 5: Connecting Devices to the Switch.....</i>	<i>15</i>
<i>Step 6: Installing an SFP Module.....</i>	<i>15</i>
<i>Step 7: Connecting to the Console Port to Manage the Switch (initial configuration)</i>	<i>16</i>
<i>Step 8: Connecting a Redundant Power Supply to the Device</i>	<i>18</i>
APPENDIX A: TECHNICAL SPECIFICATIONS.....	19
APPENDIX B: TROUBLESHOOTING	21
<i>Troubleshooting Chart.....</i>	<i>21</i>
<i>Additional Troubleshooting Suggestions.....</i>	<i>21</i>
APPENDIX C: DEFAULT SETTINGS	23

Figures

FIGURE 1-1. PACKAGE CONTENTS.....	8
FIGURE 2-1. FRONT PANEL OF THE FSM7326P MANAGED POWER OVER ETHERNET SWITCH.....	9
FIGURE 2-2. BACK PANEL OF THE FSM7326P MANAGED POWER OVER ETHERNET SWITCH	ERROR! BOOKMARK NOT DEFINED.
FIGURE 2-3. WARNING! DO NOT CREATE REDUNDANT PATHS BETWEEN NETWORK DEVICES	10
FIGURE 3-1. ATTACHING MOUNTING BRACKETS	14
FIGURE 3-2. CONNECTING DEVICES TO THE SWITCH.....	15
FIGURE 3-3. INSTALLING A GIGABIT ETHERNET MODULE INTO AN FSM7326P	16
FIGURE 3-4. CONFIGURATION THROUGH THE CONSOLE INTERFACE.....	17
FIGURE 3-5. CONNECTING THE RPS	18

Tables

TABLE 2-1. FRONT PANEL LEADS	11
TABLE 3-1. SITE REQUIREMENTS	13
TABLE B-1. TROUBLESHOOTING CHART	21

CHAPTER 1: INTRODUCTION

Congratulations on your purchase of a NETGEAR Model FSM7326P Managed Power over Ethernet Switch! Your NETGEAR Switch is a state-of-the-art, high-performance, IEEE-compliant network solution designed for users who want ease of use along with powerful management features you can use to eliminate bottlenecks, boost performance, and increase productivity.

This Installation Guide will assist you in getting your switch up and running. For a detailed description of the management features in this switch, refer to the User Guide, located on your Resource CD for Managed Switches that came with your switch.

This chapter serves as the introduction for using your NETGEAR FSM7326P Switch and provides the following information:

- Overview
- Switch Features
- Package contents

Overview

Your NETGEAR Model FSM7326P Managed Power over Ethernet Switch provides the benefit of management with a complete package of features for the observation, configuration, and control of your network. With a Web-based Graphical User Interface (GUI), the switch's many capabilities can be viewed and used in a simple and intuitive manner. For those who prefer a more traditional interface, there is Command Line Interface (CLI) available through the console port on the front, or a telnet connection via the network. The switch's management features include SNMP and RMON for port and switch information, VLAN for traffic control, port trunking for increased bandwidth, and Class of Service (CoS) for traffic prioritization. These features and more will allow you to better understand and control your network.

Your NETGEAR Model FSM7326P Managed Power over Ethernet Switch also provides twenty-four 10/100 twisted pair Fast Ethernet ports and 2 miniGBIC/twisted pair combo Gigabit Ethernet ports on the front panel. Using these Gigabit ports, you can create high-speed connections to a server or network backbone. In addition, your NETGEAR Model FSM7326P Managed Power over Ethernet Switch is IEEE802.3af (Power over Ethernet) compliant and is capable of providing up to 15 watts of power to IEEE802.3af-compliant powered devices, thus freeing you from having to use a separate power adapter to power those devices.

For example, you can connect:

- Switches to each other with high-speed links
- High-speed servers
- Fiber and copper Gigabit Ethernet networks
- IEEE802.3af compliant powered devices, such as wireless access points, IP phones, IP cameras, etc.

Your NETGEAR Model FSM7326P Managed Power over Ethernet Switch can be freestanding, or rack mounted in a wiring closet or equipment room. It is IEEE-compliant and offers low latency for high-speed networking. It includes 24 auto-sensing 10/100 ports. The 10/100 ports are shielded RJ-45 ports that automatically negotiate to the highest speed. In addition, all 10/100 Mbps ports operate in half- or full-duplex mode, increasing the maximum bandwidth of each connection up to 20 Mbps or 200 Mbps respectively. Using Auto Uplink™ technology, each RJ-45 port automatically detects the proper MDI or MDI-X configuration to make the connection, eliminating the need for crossover cables. The maximum

segment length is 328 feet (100 meters) over Category 5 unshielded twisted-pair (UTP) cable.

Features

The following list identifies the key features of the NETGEAR Model FSM7326P Managed Power over Ethernet Switch:

- Twenty four 10/100 Mbps auto sensing Fast Ethernet TP ports
- Two SFP/twisted pair combo ports to allow fiber connection
- Full compatibility with IEEE standards:
 - IEEE 802.3i, (10BASE-T)
 - IEEE 802.3u (100BASE-TX)
 - IEEE 802.3ab (1000BASE-T)
 - IEEE 802.3z (1000BASE-X)
 - IEEE 802.3x (full-duplex flow control)
 - IEEE 802.3af (Power over Ethernet)
- Full Layer 2 switch management including:
 - SNMP V3
 - RMON (groups 1,2,3 and 9)
 - IEEE 802.1Q (up to 512 Static VLAN groups)
 - IEEE 802.1D (Spanning Tree)
 - IEEE 802.1w (rapid spanning tree)
 - IEEE 802.1s (multiple spanning tree)
 - IEEE 802.3ad Link Aggregation (LACP)
 - IEEE 802.1x (Port Authentication)
 - Port Mirroring
 - DHCP/BootP Client for automatic IP address setup
 - Configuration file export/import
 - TFTP firmware upgrade
- Layer 3 features:
 - RIP I, II
 - OSPF V2
 - IP Routing
- Security to better safeguard your network:
 - Password Access Control
 - IP Access Control List
 - RADIUS Client Support
- Traffic management to better manage traffic flows through your switch:
 - IEEE 802.1p (Class of Service)
 - DiffServ traffic prioritization
 - Broadcast Storm Control
 - IGMP snooping
 - Half-duplex back-pressure control
 - Full-duplex IEEE 802.3x pause frame flow control

- Multiple interfaces to access the management features:
 - Browser-based Graphical User Interface (GUI)
 - Command Line Interface (CLI)
 - Telnet or Console
 - SNMP-based Network Management Software (NMS)
- Automatic hardware configuration on all Ethernet RJ-45 ports:
 - Auto-sensing and auto-negotiation of speed
 - Auto Uplink™ on all ports to automatically make the right connection (MDI/MDI-X)
 - Full- and half-duplex functions
- Automatic address learning function to build the packet-forwarding information table. The table can contain up to 8K media access control (MAC) addresses (that is, the switch can support networks with as many as 8K devices).
- Store-and-Forward transmission to remove bad packets from the network
- LED indicators for monitoring of power, link, activity, speed, duplex, and PoE
- Flexible installation:
 - Standalone desktop installation
 - 19-inch standard rack-mount
- Standard 1U case size

Package Contents

The figure below shows the package contents for the Managed Switch.



Figure 1-1. Package Contents

Verify that your package contains the following:

- FSM7326P Managed Power over Ethernet Switch
- Rubber footpads for tabletop installation
- Rubber caps for the 2 miniGBIC sockets
- Power cord
- Null-modem console cable
- Rack-mount kit for installing the switch in a 19-inch rack
- This Installation Guide
- CD ROM
- Support Information Card
- Warranty & Owner Registration Card

If any item is missing or damaged, contact your place of purchase immediately.

CHAPTER 2: PHYSICAL DESCRIPTION

This chapter describes the hardware features of the NETGEAR Model FSM7326P Managed Power over Ethernet Switch. Topics include:

- Front and back panels
- 10/100 Mbps auto-sensing RJ-45 ports
- SFP module bay
- LED descriptions
- Console port

Front and Back Panels

Figures 2-1 and 2-2 show the key components on the front and back panels of the NETGEAR Model FSM7326P Managed Power over Ethernet Switch.

The front panel contains LEDs, RJ-45 jacks, SFP module bays, and a console port. The back panel has a standard AC power receptacle for accommodating the supplied power cord and a connector for a redundant power supply.



Figure 2-1. Front and Rear Panel of the FSM7326P Managed Power over Ethernet Switch



Figure 2-2. Rear Panel of the FSM7326P Managed Power over Ethernet Switch

10/100 Mbps RJ-45 Ports

As Figures 2-1 and 2-2 show, the FSM7326P Managed Power over Ethernet Switch has 24 10/100 Mbps RJ-45 ports. These ports are auto-sensing 10/100 Mbps ports. When you insert a cable into an RJ-45 port, the switch automatically determines the maximum speed (10 or 100 Mbps) and duplex mode (half- or full-duplex) of the attached device.

To simplify the procedure for attaching devices, all RJ-45 ports support Auto Uplink. This technology lets you attach devices to the RJ-45 ports using either straight-through or crossover cables. When you insert a cable into the switch's RJ-45 port, the switch automatically:

- Senses whether the cable is a straight-through or crossover cable

- Determines whether the link to the attached device requires a “normal” connection (such as when connecting the port to a PC) or an “uplink” connection (such as when connecting the port to a router, switch, or hub)
- After determining this information, the switch automatically configures the RJ-45 port to enable communications with the attached device, without requiring user intervention. This Auto Uplink technology eliminates the need for setting uplink connections or being concerned about whether to use crossover or straight-through cables when attaching devices.

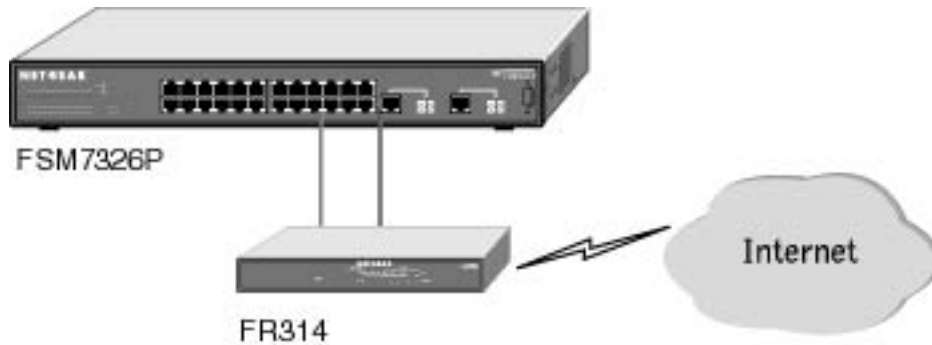


Figure 2-3. Warning! Do Not Create Redundant Paths between Network Devices

MiniGBIC/Twisted Pair Combo Ports

Port 25 and 26 are miniGBIC/twisted pair ports, meaning each of these ports can be connected through either the miniGBIC or the RJ-45 interface. However, both port types cannot be used at the same time. If both are plugged in, the fiber should be active and the copper should be inactive.

The miniGBIC bay accommodates a standard SFP module which has an SC connector that is compatible with the IEEE 802.3z 1000BASE-SX standard.

LED Descriptions

The front panel of the NETGEAR Model FSM7326P Managed Power over Ethernet Switch has LEDs that provide a quick and accurate display of port speed, activity, PoE status, and duplex mode. Table 2-1 summarizes the LEDs on the switch and Gigabit Ethernet module.

Table 2-1. Front Panel LEDs

Label	Color	Activity	Description
Power	Green Amber	On Off Blinking	<ul style="list-style-type: none"> ● Power supply present and operating normally ● Power supply is not present ● The device is performing boot up diagnostics
RPS	Green	On Off	<ul style="list-style-type: none"> ● RPS is detected ● RPS is either not present or is not functional
Max PoE	Amber	On Off	<ul style="list-style-type: none"> ● Power supply has reached its maximum load, and no more powered devices may be attached to the switch. ● More PoE powered devices may be attached to the switch.
10/100M & Fast Ports Link	Green Amber	On On	<ul style="list-style-type: none"> ● Link in full duplex ● Link in half duplex
Speed/Act	Green Green Amber Amber	On Blinking On Blinking	<ul style="list-style-type: none"> ● Link in 100Mbps ● Activity, transmitting or receiving packet ● Link in 10Mbps ● Activity, transmitting or receiving packet
PoE	Green	On	<ul style="list-style-type: none"> ● Power is being provided to a powered device through this port
10/100/1000 Combo Ports Link	Green Amber	On On	<ul style="list-style-type: none"> ● Link in full duplex ● Link in half duplex
Speed/Act	Green Green Amber Amber	On Blinking On Blinking	<ul style="list-style-type: none"> ● Link in 100Mbps ● Activity, transmitting or receiving packet ● Link in 10Mbps ● Activity, transmitting or receiving packet
1000M/Act	Green Green	On Blinking	<ul style="list-style-type: none"> ● Link in 1000Mbps ● Activity, transmitting or receiving packet

Console Port

Your NETGEAR Model FSM7326P Managed Power over Ethernet Switch has a console port on the front panel. This port is labeled **Console** and is **required for initial management configuration** of the switch. It also lets you manage the switch using a directly connected VT-100 terminal, personal computer (PC), Apple Macintosh, or UNIX workstation. The terminal, computer, or workstation connects to the console port using the null-modem cable supplied with your switch.

The console port is configured to use the following settings:

- Baud rate: 9,600 bps
- Data bits: 8
- Parity: none
- Stop bit: 1
- Flow control: none

These settings appear below the connector on the switch front panel.

In addition to using the console port, you can manage the switch using a Web browser or a Simple Network Management Protocol (SNMP) management program.

For more information about console-port connections, see [Connecting to the Console Port to Manage the Switch \(initial configuration\)](#). For more information about managing the switch, see the User Guide located on the CD-ROM.

CHAPTER 3: INSTALLATION

This chapter describes the installation procedures for your NETGEAR Model FSM7326P Managed Power over Ethernet Switch. Switch installation involves the following steps:

[Step 1: Preparing the Site](#)

[Step 2: Installing the Switch](#)

[Step 3: Checking the Installation](#)

[Step 4: Applying AC Power](#)

[Step 5: Connecting Devices to the Switch](#)

[Step 6: Installing an SFP Module](#)

[Step 7: Connecting to the Console Port to Manage the Switch \(initial configuration\)](#)

[Step 8: Connecting a Redundant Power Supply to the Device](#)

Step 1: Preparing the Site

Before you install your switch, be sure your operating environment meets the operating environment requirements in the table below.

Table 3-1. Site Requirements

Characteristics	Requirements
Mounting Desktop installations: Rack-mount installations:	Provide a flat table or shelf surface. Use a 19-inch (48.3-centimeter) EIA standard equipment rack that is grounded and physically secure. You also need the rack-mount kit supplied with your switch.
Access	Locate the switch in a position that lets you access the front panel RJ-45 ports, view the front panel LEDs, and access the rear-panel power connector.
Power source	Provide a power source within 6 feet (1.8 meters) of the installation location. Power specifications for the switch are shown in Appendix C. Be sure the AC outlet is not controlled by a wall switch, which can accidentally turn off power to the outlet and the switch.
Environmental Temperature: Operating humidity:	Install the switch in a dry area, with ambient temperature between 0 and 40°C (32 and 104°F). Keep the switch away from heat sources such as direct sunlight, warm air exhausts, hot-air vents, and heaters. The installation location should have a maximum relative humidity of 90%, non-condensing.
Ventilation: Operating conditions:	Do not restrict airflow by covering or obstructing air inlets on the sides of the switch. Keep at least 2 inches (5.08 centimeters) free on all sides for cooling. Be sure there is adequate airflow in the room or wiring closet where you intend to install the switch. Keep the switch at least 6 ft (1.83 m) away from nearest source of electromagnetic noise, such as a photocopy machine.

Step 2: Installing the Switch

You can install your NETGEAR Model FSM7326P Managed Power over Ethernet Switch on a flat surface or in a standard 19-inch rack.

Installing the Switch on a Flat Surface

The switch ships with four self-adhesive rubber footpads. Stick one rubber footpad on each of the four concave spaces on the bottom of the switch. The rubber footpads cushion the switch against shock/vibrations.

Installing the Switch in a Rack

To install the switch in a rack, use the following procedure. To perform this procedure, you need the 19-inch rack-mount kit supplied with your switch.

1. Attach the supplied mounting brackets to the side of the switch.
2. Insert the screws provided in the rack-mount kit through each bracket and into the bracket mounting holes in the switch.
3. Tighten the screws with a #1 Phillips screwdriver to secure each bracket.
4. Align the mounting holes in the brackets with the holes in the rack, and insert two pan-head screws with nylon washers through each bracket and into the rack.
5. Tighten the screws with a #2 Phillips screwdriver to secure the switch in the rack.



Figure 3-1. Attaching Mounting Brackets

Step 3: Checking the Installation

Before you apply power:

- Inspect the equipment thoroughly.
- Verify that all cables are installed correctly.
- Check routing to make sure cables are not damaged and do not create a safety hazard.
- Be sure all equipment is mounted properly and securely.

Step 4: Applying AC Power

NETGEAR Model FSM7326P Managed Power over Ethernet Switch does not have an ON/OFF switch; the only method of applying or removing AC power is by connecting or disconnecting the power cord. Before you connect the power cord, select an AC outlet that is not controlled by a wall switch so you can easily turn off power to the switch. After you select an appropriate outlet, use the following procedure to apply AC power:

1. Connect the female end of the supplied AC power adapter cable to the power receptacle on the back of the switch.
2. Connect the 3-pronged end of the AC power adapter cable to a grounded 3-pronged AC outlet.

When you apply power, the **Power** LED on the switch's front panel will be Amber as it conducts a Power On Self Test (POST). After the switch passes the POST, the **Power** LED will change to Green and the switch is functional and ready to pass data.

If the **Power** LED does not go on, check that the power cable is plugged in correctly and that the power source is good. If this does not resolve the problem, refer to [Appendix B, Troubleshooting](#).

Step 5: Connecting Devices to the Switch

The following procedure describes how to connect devices to the switch's network RJ-45 ports. Your NETGEAR Model FSM7326P Managed Power over Ethernet Switch contains Auto Uplink™ technology, which allows you to attach devices using either straight-through or crossover cables.

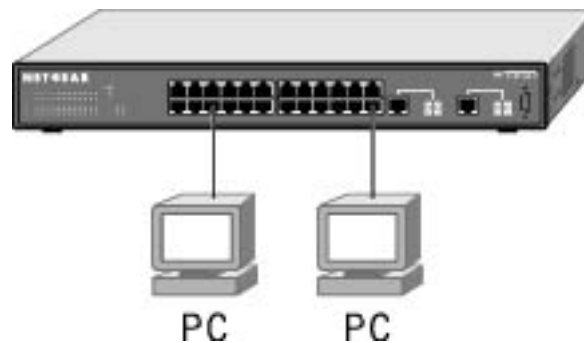


Figure 3-2. Connecting Devices to the Switch

Connect each device to an RJ-45 network port on the switch's front panel as shown in the figure above. Use Category 5 (Cat5) unshielded twisted-pair (UTP) cable terminated with an RJ-45 connector to make these connections.

Note: Ethernet specifications limit the cable length between the switch and the attached device to 100 m (328 ft)

The 24 10/100 Fast Ethernet ports of your NETGEAR Model FSM7326P Managed Power over Ethernet Switch is capable of providing up to 15 watts of DC power to IEEE 802.3af compliant powered devices, thus eliminating the need to use an external power adapter to power them. This process is fully automatic. When you plug a IEEE 802.3af compliant powered device into an RJ45 port, the NETGEAR Model FSM7326P Managed Power over Ethernet Switch will automatically detect the its presence and thereby begin to feed power to it. If the network device does not support PoE, no power will be provided, and the attached device will not be damaged in any way.

Step 6: Installing an SFP Module

The following procedure describes how to install an SFP Gigabit Ethernet module in the switch's Gigabit module bays. The Standard SFP Module is sold separately from the FSM7326P. If you do not want to install an SFP module at this time, skip this procedure.

To install an SFP module:

1. Insert the SFP module into the SFP module bay. Press firmly to ensure the module seats into the connector.
2. After the switch has been configured for management (see [Step 7](#)), use one of the management interfaces (Web browser or console interface) to configure the port with the SFP module installed to the SFP option.

To install additional Gigabit Ethernet modules, repeat this procedure.

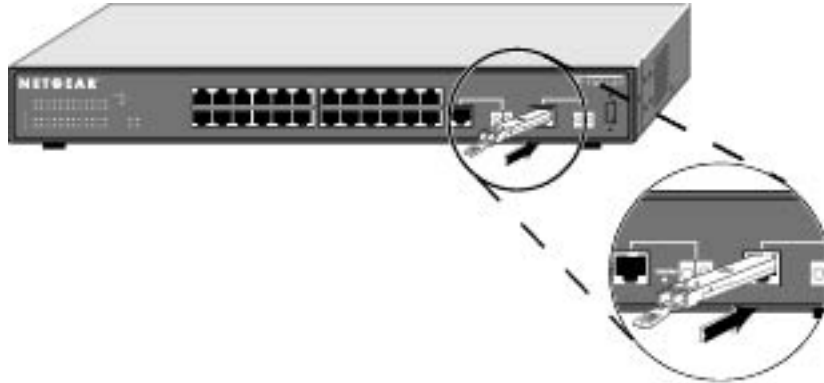


Figure 3-3. Installing a Gigabit Ethernet Module into an FSM7326P

Step 7: Connecting to the Console Port to Manage the Switch (initial configuration)

To learn the IP address, you must first access the Command Line management via the console interface.

After you power up the switch for the first time, you can connect to it using a VT100/ANSI terminal or a PC, Apple Macintosh, or UNIX workstation that is directly connected to the switch's console port.

To connect a console to the switch:

1. Connect a VT100/ANSI terminal or a PC, Apple Macintosh, or UNIX workstation to the switch's console port, labeled Console, using the null-modem cable supplied with the switch. The supplied null-modem cable has 9-pin connectors on each end.
2. If you attached a PC, Apple Macintosh, or UNIX workstation, start a terminal-emulation program:
 - Microsoft Windows users can use HyperTerminal, which comes with the Windows operating systems.
 - Macintosh users can use ZTerm.
 - UNIX users can use a terminal emulator such as TIP.
3. Configure the terminal-emulation program to use the following settings:
 - Baud rate: 9,600 bps
 - Data bits: 8
 - Parity: none
 - Stop bit: 1
 - Flow control: none
4. Press the return key, and the screen below should appear:

```
fsm7326p - HyperTerminal
File Edit View Call Transfer Help
[Icons]
FSM7326 Startup -- Main Menu
1 - Start FSM7326 Application
2 - Display Utility Menu
Select (1, 2):

FSM73xx starting...started!

(FSM7326P)
User:admin
Password:

NOTE: Enter '?' for Command Help. Command help displays all options
that are valid for the 'normal' and 'no' command forms. For
the syntax of a particular command form, please consult the
documentation.

(FSM7326P) >en
Password:

(FSM7326P) #

Connected 3:15:09 VT100 9600 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure 3-4. Configuration through the console interface

5. The login name is “admin” and there is no password assigned. We strongly recommend that you enable an admin password to secure access to the switch management function. After you are logged in, the screen should show **(FSM7326P)>** prompt.

The switch is shipped with using DHCP as default to receive the management IP address from DHCP server from the network. Enter “show network”, and it will display the management CPU’s IP address. If there is no DHCP server at the time of the switch powered up, there will be no IP address assigned to the management CPU. To gain web access to the management CPU using IP address, for example, 192.168.1.100, do as followed:

```
(FSM7326P) >enable
```

After system prompt returned with “Password:” prompt, just hit return and enter the following command

```
(FSM7326P) #vlan database
```

```
(FSM7326P) (Vlan)#vlan routing 1
```

```
(FSM7326P) (Vlan)#exit
```

```
(FSM7326P) #config
```

```
(FSM7326P) (Config)#ip routing
```

```
(FSM7326P) (Config)#interface 3/1
```

Where "3/1" is the virtual interface for vlan 1 which is created after the "vlan routing 1" command.

```
(FSM7326P) (Interface 3/1)#ip address 192.168.1.100 255.255.255.0
```

```
(FSM7326P) (Interface 3/1)#exit
```

If your PC's NIC card also assigned with IP address in the same subnet "192.168.1.x", then you can enter the switch web site by entering "192.168.1.100" in the Web browser's address line.

If you want to use an SNMP management application, you will need to note the IP address and to configure the SNMP settings in your switch so that it will respond to SNMP requests. This configuration can be done through either the console or web browser GUI. See User Guide on how to enable SNMP access. The switch has SNMP read only mode enabled by default for "public" community string.

To learn more about the managed features on your switch, refer to the User Guide on the Resource CD for Layer 3 Managed Switches.

Step 8: Connecting a Redundant Power Supply to the Device

Your NETGEAR Model FSM7326P Managed Power over Ethernet Switch has a redundant power supply connector in the back. You may choose to connect a DC-to-DC power supply to the switch to ensure that it will not fail in case the primary power supply does. To connect an RPS to the switch, first make sure the switch is turned off, and then connect the RPS to the switch as illustrated below. Once all connections are completed, turn the switch back on.

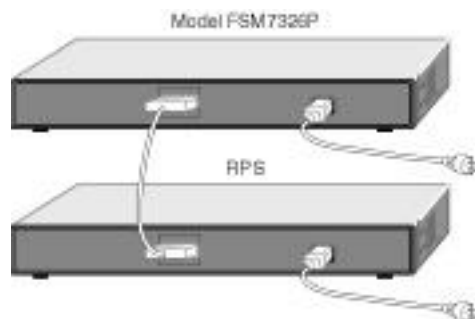


Figure 3-5. Connecting the RPS

APPENDIX A: TECHNICAL SPECIFICATIONS

This appendix provides technical specifications for the NETGEAR Model FSM7326P Managed Power over Ethernet Switch.

Network Protocol and Standards Compatibility

IEEE 802.3 10BASE-T
IEEE 802.3u 100BASE-TX
IEEE 802.3z 1000BASE-SX
IEEE 802.3ab 1000BASE-T
IEEE 802.3x flow control
IEEE 802.3af Power over Ethernet
Jumbo Frame (Up to 9216 Bytes)

Management

IEEE 802.1Q Static VLAN (Up to 4k)
IEEE 802.1p Class of Service (CoS)
IEEE 802.1D Spanning Tree Protocol (STP)
IEEE 802.1w Rapid Spanning Tree Protocol (RSTP)
IEEE 802.1s Multiple Spanning Tree Protocol (MSTP)
IEEE 802.3ad Link Aggregation (LACP) and Manual mode
IEEE 802.1x (Port Authentication)
IGMP v1, v2 Snooping Support
Port Mirroring support
SNMP v3
RFC1757 RMON 1 groups 1,2,3, and 9
RFC1213 MIB II
RFC1643 Ethernet Interface MIB
RFC1493 Bridge MIB
RFC2131 DHCP client (& BootP) and Server
RFC2138 RADIUS client
Broadcast storm control
Private Enterprise MIB
Configuration file upload, download (TFTP)
SSL /SSH v1
HTTPS 1.0

Interface

24 RJ-45 connectors for 10BASE-T and 100BASE-TX (Auto Uplink™ on all ports)
2 RJ45 connectors for 1000Base-T (Auto Uplink™ on all ports)
2 Small Form-factor Pluggable (SFP) slots for SFP gigabit fiber optic modules
RS-232 Console Port

LEDs

Per port (10/100): Link, Speed/Activity, PoE
Per port (gigabit): Link, Speed, Activity
Per device: Power, Max PoE, RPS

Performance Specifications

Forwarding modes: Store-and-forward

Bandwidth: 8.8 Gbps
Network latency: Less than 80 microseconds for 64-byte frames in store-and-forward mode for 10 Mbps to 100 Mbps transmission
Address database size: 8K media access control (MAC) addresses per system
Buffer memory: 256KB embedded memory
Acoustic noise: (ANSI-S10.12): 45 dB
Heat Dissipation: 18.99 Btu/hr
Mean Time Between Failure (MTBF): 58,300 hours (~ 6.5 years)

Power Supply

Power Consumption: 150 W maximum
100-240VAC/50-60 Hz universal input

Physical Dimensions

440 x 252 x 39 mm (W x D x H)
17.32 x 9.92 x 1.57 inch

Environmental Specifications

Operating temperature: 0 to 40°C
Storage temperature: -20 to 70°C
Operating humidity: 90% maximum relative humidity, non-condensing
Storage humidity: 95% maximum relative humidity, non-condensing
Operating altitude: 10,000 ft (3,000 m) maximum
Storage altitude: 10,000 ft (3,000 m) maximum

Electromagnetic Emissions

CE mark, commercial
FCC Part 15 Class A
VCCI Class A
EN 55022 (CISPR 22), Class A
C-Tick

Electromagnetic Immunity

EN 50082-1
EN 55024

Safety

CE mark, commercial
CSA certified (CSA 22.2 #950)
TUV licensed (EN 60 950)
UL listed (UL 1950)/cUL IEC950/EN60950

APPENDIX B: TROUBLESHOOTING

This appendix provides information about troubleshooting the NETGEAR Model FSM7326P Managed Power over Ethernet Switch.

Troubleshooting Chart

The table below lists symptoms, causes, and solutions of possible problems.

Table B-1. Troubleshooting Chart

Symptom	Cause	Solution
Power LED is off.	No power is received	Check the power cord connections at the switch and the connected device. Make sure all cables used are correct and comply with Ethernet specifications.
Link LED is off or intermittent.	Port connection is not working.	Check the crimp on the connectors and make sure that the plug is properly inserted and locked into the port at both the switch and the connecting device. Make sure all cables used are correct and comply with Ethernet specifications. Check for a defective adapter card, cable, or port by testing them in an alternate environment where all products are functioning.
File transfer is slow or performance degradation is a problem.	Half- or full-duplex setting on the switch and the connected device are not the same.	Make sure the attached device is set to auto negotiate.
A segment or device is not recognized as part of the network.	One or more devices are not properly connected, or cabling does not meet Ethernet guidelines.	Verify that the cabling is correct. Be sure all connectors are securely positioned in the required ports. Equipment may have been accidentally disconnected.
ACT LED is flashing continuously on all connected ports and the network is disabled	A network loop (redundant path) has been created (see Figure 2-3).	Break the loop by ensuring that there is only one path from any networked device to any other networked device.

Additional Troubleshooting Suggestions

If the suggestions in Table B-1 do not resolve your problem, refer to the troubleshooting suggestions below:

Network Adapter Cards

Make sure the network adapter cards installed in the computers are in working condition and the software driver has been installed.

Configuration

If problems occur after altering the network configuration, restore the original connections and determine the cause by implementing the new changes, one step at a time. Make sure that cable distances, repeater limits, and other physical aspects of the installation do not exceed the Ethernet limitations.

Switch Integrity

If required, verify the integrity of the switch by resetting it. To reset the switch, use the Tools> Reset command or remove AC power from the switch and then reapply AC power. If the problem continues, contact NETGEAR technical support. In North America, call 1-888-NETGEAR. If you are outside of North America, please refer to the support information card included with your product.

Auto Negotiation

The 10/100/1000 Mbps ports negotiate the correct duplex mode and speed if the device at the other end of the link supports auto negotiation. If the device does not support auto negotiation, the switch only determines the speed correctly and the duplex mode defaults to half-duplex.

The gigabit port on the Gigabit module negotiates speed, duplex mode, and flow control, provided that the attached device supports auto negotiation.

APPENDIX C: DEFAULT SETTINGS

This appendix provides the default settings for the NETGEAR Model FSM7326P Managed Power over Ethernet Switch.

Feature	FSM7326P Default Setting
Port Speed	Auto negotiation
Port Duplex	Auto negotiation
MTU (packet size)	1518 (1522 with VLAN tagging)
Flow Control (half duplex)	Enabled
Flow Control (full duplex)	Enabled
Broadcast Storm Control	Disabled
Gigabit port type	Auto detect
IP Configuration	DHCP enabled
Password protection	Disabled
User Name	Admin
Password	(none)
VLAN	All ports belong to default VLAN (VLAN 1) as untagged ports
IP Multicast Filtering	Disabled
Spanning Tree Protocol	Enabled (IEEE 802.1s)
Traffic Prioritization DiffServe	Disabled
MAC address aging	300 seconds
SNMP Community	Public (Read Only)
Admin Edge Port	Enabled
Link Aggregation	Disabled
Port Mirroring	Disabled
Jumbo Frame	Disabled
Traffic Prioritization	Disabled
ACL	Disabled
GVRP	Disabled
GMRP	Disabled
IP Routing	Disabled
OSPF	Disabled
RIP	Disabled